


# **TMX**<sup>TM</sup>

**HIGH-SPEED DATA ACQUISITION SYSTEM**

**Introducing the TMX  
High-Speed Data  
Acquisition System**  
**Redefining High Speed**

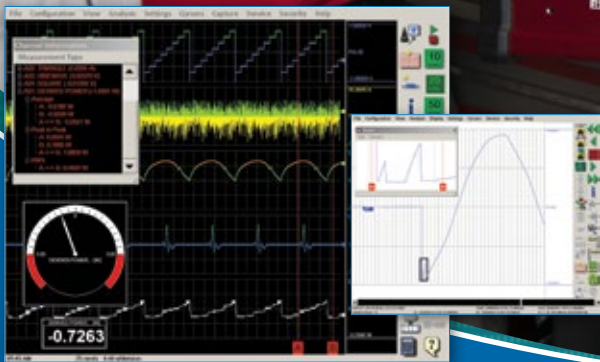

**That's High Speed Data Acquisition.**

- 100 kHz Bandwidth
- Up to 96 Channels<sup>17</sup>
- LCD High-Resolution Touch Screen Display
- Dedicated 1 TB Hard Drive for Data Capture
- 800 kHz Sample Rate/Channel

*Astro-Med, Inc is now*  
**AstroNova<sup>TM</sup>**  
**Test & Measurement**  

---

**AstroNovainc.com**



**ASTRONOVA RECORDERS ARE THE EASIEST TO USE DATA ACQUISITION SYSTEMS ON THE MARKET**

With the TMX, there's no need to fumble with those awkward buttons or knobs and complicated configurations! The TMX features a high resolution, 17" touch screen display, as well as pre-defined set up options, making test setup a breeze! With the TMX, you will be up and running in no time!

**See for Yourself! Check out our online video demo at: [www.astro-med.com/tmx](http://www.astro-med.com/tmx)**

Whatever your test requirements are, the TMX offers a configuration to meet your needs. The TMX accepts a wide variety of inputs in one system.

Do multiple users in your group require different setups? No problem. With the TMX, you can easily create and switch among multiple setup configurations.



**SERVICE & SUPPORT**

AstroNova's world-class customer service and technical support teams are second to none. Available 24/7, and located locally no matter where you are in the world, you can be confident the AstroNova team is behind you anytime, anywhere.

**Quick & Easy Setup With the Modular, Field-Configurable TMX**


With the TMX's modular inputs, there's no need to purchase extra signal conditioners or struggle with unwieldy set-ups. The TMX accepts a variety of inputs and lets you mix and match different sensors within one test, so you can connect pressure sensors, strain gauges, thermocouples, high voltage and other signals to one system. Best of all, the TMX automatically converts data to Engineering units, giving you your data in units of pressure, strain, temperature, voltage, and more.

Should your requirements change later, the TMX allows for growth, allowing you to add more channels by simply installing input modules.

**PRECISELY SYNCHRONIZED DATA CAPTURE**

**Don't Miss a Glitch!**

Whether your test runs for 100 milliseconds or 100 hours, the TMX won't miss a glitch. With its dedicated, 1 TB hard drive for data capture (SSDs optional), the TMX is ideal for long-term trending and high-speed event detection. Powerful Embedded Scope Capture and intelligent triggering provide low speed trending while simultaneously monitoring and storing highly sampled, time-synchronized events.

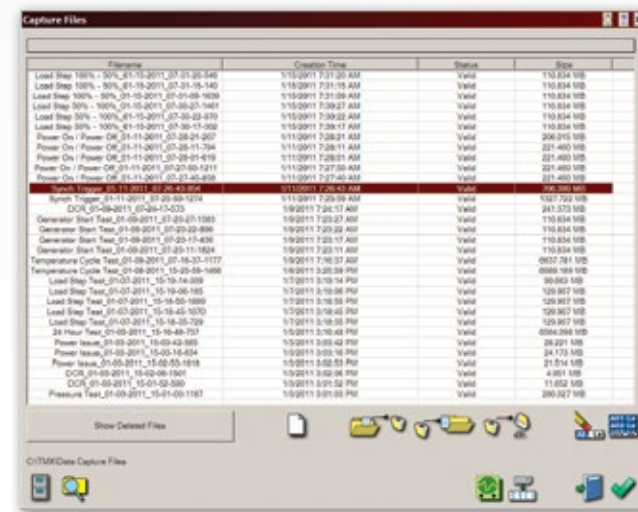


Filename	Creation Time	Status	Size
Lead Sleep 100% - 50%_01-15-2011_07-21-20-540	1/15/2011 7:21:20 AM	Valid	110,834 KB
Lead Sleep 100% - 50%_01-15-2011_07-21-18-142	1/15/2011 7:21:18 AM	Valid	110,834 KB
Lead Sleep 100% - 50%_01-15-2011_07-21-09-1038	1/15/2011 7:21:09 AM	Valid	110,834 KB
Lead Sleep 50% - 100%_01-15-2011_07-20-51-1467	1/15/2011 7:20:51 AM	Valid	110,834 KB
Lead Sleep 50% - 100%_01-15-2011_07-20-43-030	1/15/2011 7:20:43 AM	Valid	110,834 KB
Lead Sleep 50% - 100%_01-15-2011_07-20-15-032	1/15/2011 7:20:15 AM	Valid	110,834 KB
Power On 1 Power Off_01-15-2011_07-20-01-057	1/15/2011 7:20:01 AM	Valid	200,012 KB
Power On 1 Power Off_01-15-2011_07-20-11-794	1/15/2011 7:20:11 AM	Valid	201,460 KB
Power On 1 Power Off_01-15-2011_07-20-01-419	1/15/2011 7:20:01 AM	Valid	201,460 KB
Power On 1 Power Off_01-15-2011_07-20-01-511	1/15/2011 7:20:01 AM	Valid	201,460 KB
Power On 1 Power Off_01-15-2011_07-20-01-859	1/15/2011 7:20:01 AM	Valid	201,460 KB
<b>Temperature Cycle Test_01-15-2011_07-20-01-1177</b>	<b>1/15/2011 7:20:01 AM</b>	<b>Valid</b>	<b>1,027,722 KB</b>
DCR_01-09-2011_01-09-15-032	1/9/2011 7:20:15 AM	Valid	241,372 KB
Generator Start Test_01-09-2011_07-20-01-1383	1/9/2011 7:20:01 AM	Valid	110,834 KB
Generator Start Test_01-09-2011_07-20-01-886	1/9/2011 7:20:01 AM	Valid	110,834 KB
Generator Start Test_01-09-2011_07-20-11-408	1/9/2011 7:20:11 AM	Valid	110,834 KB
Generator Start Test_01-09-2011_07-20-11-1834	1/9/2011 7:20:11 AM	Valid	110,834 KB
Temperature Cycle Test_01-09-2011_07-16-33-1177	1/9/2011 7:16:37 AM	Valid	492,781 KB
Temperature Cycle Test_01-09-2011_15-19-08-1498	1/9/2011 5:20:08 PM	Valid	492,888 KB
Lead Sleep Test_01-03-2011_15-19-14-309	1/3/2011 3:19:14 PM	Valid	109,827 KB
Lead Sleep Test_01-03-2011_15-19-08-145	1/3/2011 3:19:08 PM	Valid	109,827 KB
Lead Sleep Test_01-03-2011_15-19-05-1680	1/3/2011 3:19:05 PM	Valid	109,827 KB
Lead Sleep Test_01-03-2011_15-19-45-1070	1/3/2011 3:19:45 PM	Valid	109,827 KB
Lead Sleep Test_01-03-2011_15-19-05-129	1/3/2011 3:19:05 PM	Valid	109,827 KB
20 Hour Test_01-03-2011_15-19-48-737	1/3/2011 3:19:48 PM	Valid	696,068 KB
Power Heave_01-03-2011_15-03-42-880	1/3/2011 3:03:42 PM	Valid	28,221 KB
Power Heave_01-03-2011_15-03-14-834	1/3/2011 3:03:14 PM	Valid	24,173 KB
Power Heave_01-03-2011_15-03-03-1818	1/3/2011 3:03:03 PM	Valid	21,574 KB
DCR_01-03-2011_15-03-09-1560	1/3/2011 3:03:09 PM	Valid	4,981 KB
DCR_01-03-2011_15-03-00-580	1/3/2011 3:00:58 PM	Valid	11,852 KB
Pressure Test_01-03-2011_15-01-40-1187	1/3/2011 3:01:40 PM	Valid	280,927 KB

The TMX enables you to stack thousands of data captures on the hard drive.

**Embedded Scope Captures**

Using the powerful embedded scope capture and intelligent triggering, the TMX provides low speed trending while simultaneously monitoring and storing highly sampled time synchronized transients or events. The TMX will time stamp and embed that important data into the trend recording, assuring that you capture details of critical data.

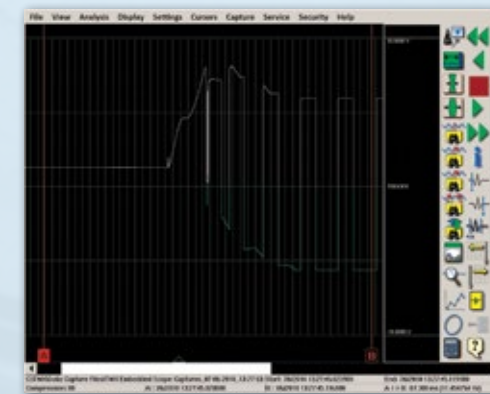


**Multiple Sample Rates**

Up to four sample rates can be used per TMX data capture. This allows you to manage file size by assigning higher sample rates to critical signals and lower sample rates to trending signals.

**Triggering**

The TMX contains advanced triggering capabilities that allow you to start and/or stop a recording based on changes in your input signals. The circular data buffer of the TMX allows you to set and record large amounts of pre-trigger data. Window, level and slew triggering allow you to set up trigger conditions precisely for your application, while logical AND and OR triggering ensure that you trigger only on events that are important to you.

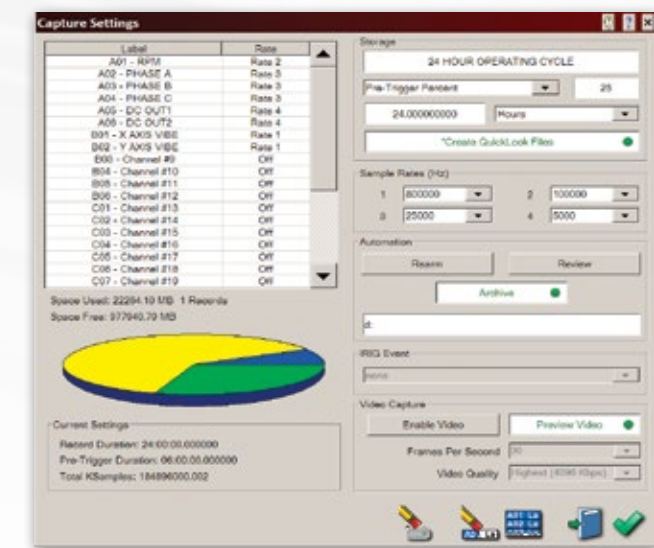

**Dedicated Hard-Drive**

Unlike Windows-based systems, the TMX features a 1 TB hard drive dedicated solely for capturing data (optional SSDs). Removable drives allow your data to be easily transferred and stored securely, leaving no proprietary data on the machine.

AstroNova's powerful BackChannel™ technology ensures precise synchronization of analog, audio, video and data bus inputs. You will never have to rely on Windows® to synchronize your data.



## FLEXIBLE INPUTS & DATA PROCESSING

The modular, field-configurable TMX accepts all of your inputs, including analog, video, audio, IRIG, CAN bus, MIL-1553 and more, all in one system!

The TMX uses modular analog inputs allowing you to easily configure the system for any testing application. The TMX has many optional analog input modules including Voltage, High-Voltage, Thermocouple, Bridge, and others.



## IRIG/GPS

The TMX-IR IRIG/GPS time option provides precise time-synchronization of data, video, and all TMX inputs with other devices.

## Video

Why waste time and money on a video recording system for a video record of your important test? The TMX can record 30 frames per second video perfectly synchronized with your analog data. Each frame is linked to a sample point giving you amazing detail of any test.

## Audio Notes

Save audio annotation into your data capture giving you a verbal account of your test. Why write notes down when you can speak them and save them with your data capture?

## Bus Inputs

The TMX CAN bus input option allows your critical bus data to be displayed and recorded with great precision along with your analog signals.

## Filtering

The TMX provides the most flexible data filtering options available. The raw unfiltered data is stored to the hard drive, allowing you the choice of pre- or post- data acquisition, low pass, high pass, band pass, and band stop filtering using Bessel, Butterworth or Chebyshev topologies.

Advanced DSP filtering allows you to see your real-time analog data as an RMS measurement, which is ideal for power monitoring applications. The integration and differentiation filter functions provide useful tools for acceleration and deceleration measurement applications.

## Hardware Counters

The TMX analog input modules all contain hardware counters that provide Frequency to Voltage (time and cycle based), Pulse Counter, Duty Cycle, Pulse Width and Period Detector measurements.

## DISPLAY

### Real-time Viewing & Setup

The TMX has a large 17" color display which allows you to view your data in real-time and post capture. Operation of the TMX is quick and easy with the intuitive touch-screen display. Interface icons and menus provide for straightforward setup and operation. There are no switches, push-buttons or other controls — complete operation is from the touch-screen. And, you can easily customize it to fit your exact needs. This means less setup time and more time for gathering data.

### Meters/Gauges/Bar Graphs

The advanced channel meters provide a variety of ways to visually indicate channel activity. View your data numerically or in other visual representations such as a gauge or horizontal/vertical bar, needle and LED readouts.

### Cursor Measurements


Placing cursors on the touch screen allows quick measurements of Time, Sample Point, Average, Min/Max & Peak-Peak Slope, RMS, Sum, Sum of Squares, Variance, Standard Deviation & Area.

### Scope Mode

Scope mode acts like a digital storage oscilloscope, providing high time-base resolution for viewing high-frequency signals. Scope mode is useful for timing and synchronization analysis, transient capture, and high-speed testing. It can be used while continuously capturing data and monitoring signals on the display.

### Alarms

Alarms provide a visual indicator when signals extend below or above specified boundaries. These boundaries are defined by setting up low and high alarm levels. The utility / DIO port provides an alarm output pin that can be used to trigger an external process when alarm conditions for selected signals occur.

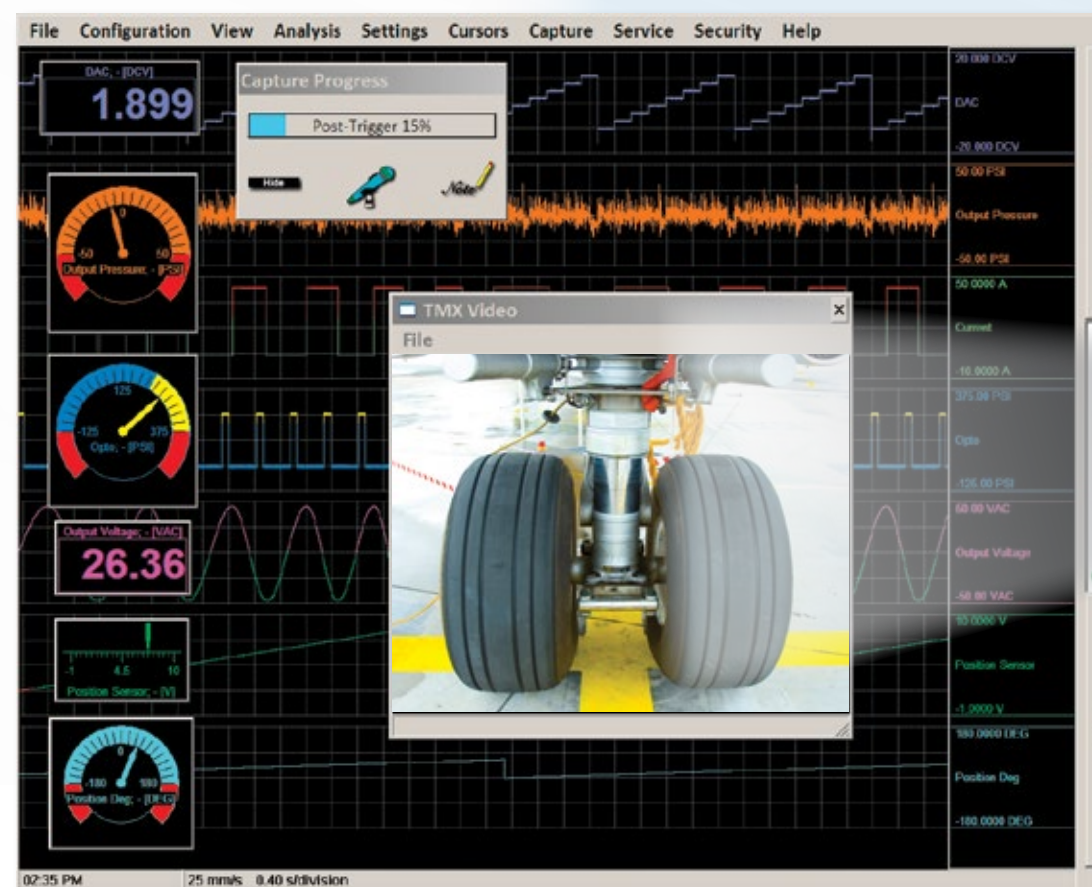



## REVIEW & POST PROCESSING WITHOUT THE DOWN TIME...

### QuickLook™


The innovative **QuickLook™** feature calculates compression and expansion factors while recording data allowing you to review GB of data in seconds and scan through large data files quickly and easily.

### LookBack™

The TMX's unique **LookBack™** feature allows you to review data during a capture and also allows the user to transfer previously recorded data without interruption to the active trend capture – truly a time saving benefit.

### Exporting Data

The TMX offers a number of ways to archive and export captured data. Data can be exported in our packed binary format – minimizing file size – or a generic ASCII format, which is compatible with most analysis packages. For applications requiring transportable media, the TMX provides eight USB 2.0 ports that open up a world of possibilities. Connect an external hard drive or USB flash drive, and archive GBytes of data at once. You can also connect a USB 2.0 Windowsprinter for printing screen shots from the recorder.

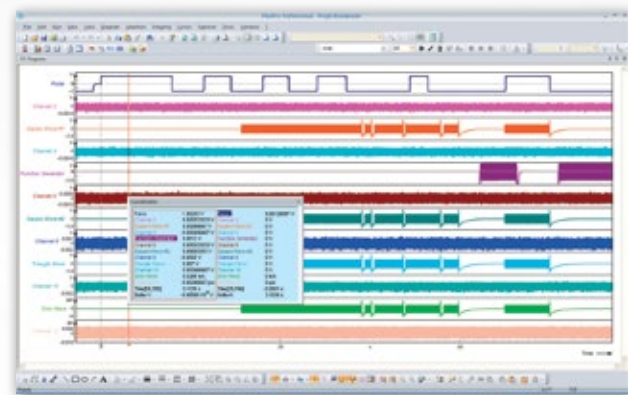


The TMX has an integral 1000BaseT Ethernet port to make exporting data to your PC or network as easy as ever. Simply connect your TMX to a network and upload only the data of interest. The Ethernet connection also provides the capability to control a TMX from a remote location using a suite of host commands.

## SOFTWARE


### AstroVIEW® X

Each TMX includes free AstroVIEW X PC based data review and analysis program. AstroVIEW X runs on any Windows PC and lets you upload and review data captured on your recorder. AstroVIEW X has built-in analysis and easily converts data into ASCII, Excel®, Mathcad®, DADiSP® and other popular formats.

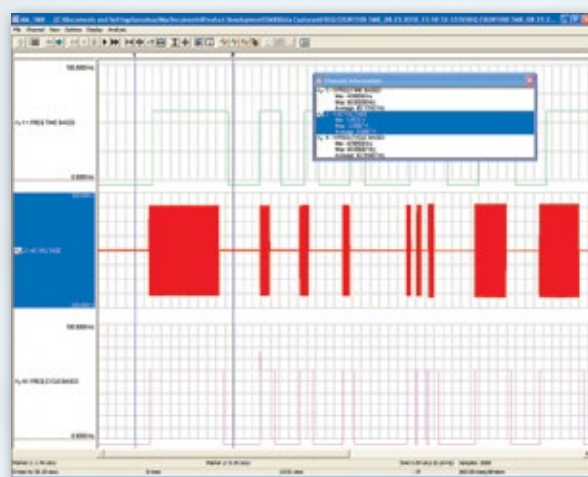

### TMX Offline™

With the TMX Offline software, working with the TMX has never been easier! This powerful software gives you the ability to create setups as well as review data on your PC. Running under Windows XP, Windows Vista or Windows 7, the TMX Offline software gives you all the tools necessary to quickly configure the system, transfer files, review and analyze your data.

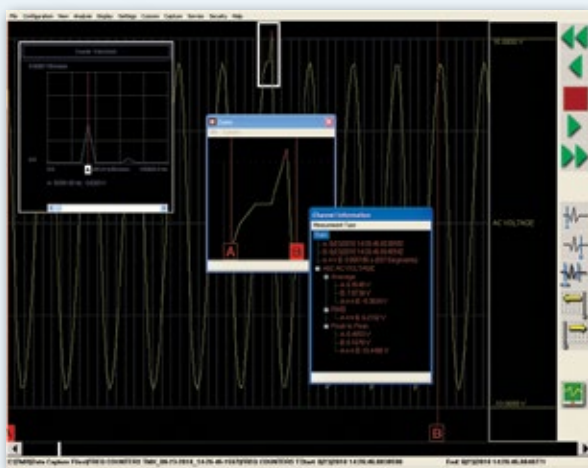

## HARDWARE CONFIGURATIONS

### TMX Portable Data Acquisition System

The TMX is designed to go anywhere your testing sends you. The tough, MIL-STD-810 tested industrial grade package gives you the freedom to bring it onto the production floor or out to a remote site.



### AstroDock™ PC Docking Station

The AstroDock is a two-drive docking station that accepts the removable hard drives from any TMX recorder. The AstroDock connects to your PC via USB 2.0 and provides immediate review capability as well as direct transfer of data capture files to your computer. Simply remove the capture drive from your TMX recorder, plug it into the AstroDock TMX and begin reviewing the data on your PC... all in seconds. Insert a new capture drive in your TMX recorder and continue to record data while you review and archive on your PC. Working with large data files has never been this fast and easy!



### TMX-E Expansion Box

The TMX-E Expansion box for the TMX adds up to three additional modules for increased channel count. The TMX supports one TMX-E



The TMX-E Expansion Box requires the TMX base system for operation.

### TMX-R Rackmount

If you're looking for a high speed data acquisition system to integrate into your test stand, take a look at the TMX-R. The TMX-R is a rackmount version of the TMX data acquisition recorder with all the same features and capabilities. The TMX-R is configured for installation in a standard nineteen-inch rack, and features six module slots.





## TMX MAINFRAME

### MAINFRAME CHASSIS

Maximum Analog Modules	3 (6 with optional expansion unit)
Maximum Analog Waveforms	48 (up to 96 with optional expansion unit, module dependent)
Event Inputs (TTL)	16
Derived Channels	+, -, x, ÷, Exponential, Sin, Cos, Tan, √, Absolute Value

### DATA ACQUISITION RECORDING

Operational Modes	Scope, Review, Real-time (strip-chart)
Recording Method	Internal removable 1 TB SATA disk drive or optional SSDs
Time Stamp	Time and date automatically saved with data
Trigger Point	Amount of pre and post trigger is user adjustable
Filtering	Low pass, high pass, band pass, band stop, RMS, integration & differentiation

### COLOR DISPLAY

Type	Active matrix color LCD (TFT)
Viewing Area	17" (43.2 cm) diagonal
Resolution	1280 x 1024
Touch	Full screen, resistive

## TMX OPTIONS—INPUT MODULE SPECIFICATIONS

### UNIV-6 UNIVERSAL ISOLATED VOLTAGE MODULE WITH DC BRIDGE

#### UNIV-6 GENERAL SPECIFICATIONS

Channels (per module)	6
Maximum Sample Rate/Ch	800 kHz (400 kHz with TMX-E)
Isolation	250 Vrms or DC, Cat II

#### UNIV-6 SINGLE ENDED VOLTAGE INPUT

Maximum Bandwidth	Up to 100 kHz
Input Type	Isolated, AC/DC coupled
Specified Ranges	100 mVFS to 800 VFS

#### UNIV-6 DIFFERENTIAL VOLTAGE INPUT/BRIDGE MEASUREMENTS

Maximum Bandwidth	50 kHz
Input Type	Differential, DC coupled
Specified Ranges	10 mVFS to 2 VFS
Excitation	Isolated 10 V @ 30 mA

### IHVM-6 ISOLATED HIGH VOLTAGE MODULE

Channels (per module)	6
Maximum Sample Rate/Ch	800 kHz (400 kHz with TMX-E)
Maximum Bandwidth	60 kHz
Input Type	Isolated Differential
Isolation	600 Vrms or 1000 VDC, Cat IV

### IBRM-6 ISOLATED BRIDGE MODULE

Channels (per module)	6
Maximum Sample Rate/Ch	800 kHz (400 kHz with TMX-E)
Maximum Bandwidth	50 kHz

## TMX OPTIONS—ADVANCED

### TMX-R RACKMOUNT VERSION (FITS STANDARD 19" RACKS)

Maximum Analog Modules	6
Maximum Analog Waveforms	96
Dimensions	15.75" (40 cm) H x 18.97" (48.2 cm) W x 17.15" (43.6 cm) D

### TMX-VA VIDEO/AUDIO ACQUISITION

Analog Input Type/Connector	Composite/BNC
Supported Video Formats	NTSC, PAL
NTSC Capture Rate	30 fps (frames per second)
PAL Capture Rate	25 fps (frames per second)
Audio Capture Rate	Up to 44.1 kHz

### COMPLIANCE/ENVIRONMENTAL

Operating Temp	40 to 105 °F (0 to 40 °C)
Operating Humidity	10 % to 90 % non condensing
Shock	MIL-STD-810F Method 516.5, Procedure I
Vibration	MIL-STD-810F Method 514.5, Procedure I

### PHYSICAL

Enclosure	Aluminum, with armored end caps
Dimensions	14.5" (36.8 cm) H x 19" (48.3 cm) W x 7.5" (19.1 cm) D (without handle)
Weight (including 3 modules)	37 lbs (15.78 kg)

### INTERFACE

Ethernet	1000BaseT
VGA	For displaying data on an external monitor
USB 2.0 (8 ports/unit)	For external peripherals and file export
Expansion Port	For connection of optional TMX-E

### SYSTEM POWER

Input Voltage Range	100 to 264 VAC or 24 VDC @ 11 A
Frequency Range	47 Hz to 63 Hz

Input Type	Isolated Differential
Isolation	250 Vrms or DC, Cat II
TEDS Capability	Yes

### IEPE-6 ISOLATED PIEZO ELECTRIC SENSOR MODULE

Channels (per module)	6
Maximum Sample Rate/Ch	800 kHz (400 kHz with TMX-E)
Maximum Bandwidth	Up to 30 kHz
Input Type	Isolated Differential
Isolation	250 Vrms or DC, Cat II
TEDS Capability	Yes

### NIDV-16 NON-ISOLATED DIFFERENTIAL VOLTAGE MODULE

Channels (per module)	16
Maximum Sample Rate/Ch	200 kHz (100 kHz with TMX-E)
Maximum Bandwidth	40 kHz
Input Type	Differential, non-isolated DC coupled
Maximum Rated Input	± 50 VDC (35 Vrms)
Specified Ranges	80 mVFS to 100 VFS

### ITCU-12 ISOLATED THERMOCOUPLE MODULE

Channels (per module)	12
Input Type	Type U miniature thermocouple (12 connectors)
Isolation	250 Vrms or DC, Cat II
Maximum Bandwidth	5 Hz update rate (TC sampled at 2.5 Hz)
Thermocouple Types	J, K, E, T, N, B, R, S

### TMX-E EXPANSION CHASSIS

(REQUIRES MAINFRAME CHASSIS FOR OPERATION. TMX SUPPORTS ONE TMX-E)

Maximum Analog Modules	3
Maximum Analog Waveforms	48
Dimensions	14.5" (36.8 cm) H x 19" (48.3 cm) W x 5" (12.8 cm) D
Weight (including 3 modules)	15 lbs (6.8 kg)

TO READ FULL SPECIFICATIONS,  
PLEASE VISIT  
[www.astro-med.com/tmx](http://www.astro-med.com/tmx)

Specs are subject to change. Registered trademarks belong to their respective companies.

OR CALL US AT  
**401-828-4000**

### CONTACT INFORMATION

AstroNova  
600 East Greenwich Avenue  
West Warwick, RI 02893 U.S.A.

Phone: 401-828-4000  
Toll-free: 877-867-9783 (U.S.A and Canada only)  
Fax: 401-822-2430  
Sales e-mail: [mtgroup@astro-med.com](mailto:mtgroup@astro-med.com)

