EZCT-2000C Plus

EZCT-2000C

current transformer test set

AC CURRENT SOURCE




Vanguard Instruments Company, Inc. www.vanguard-instruments.com

Vanguard Instruments Co.



EZCT-2000C Plus connections

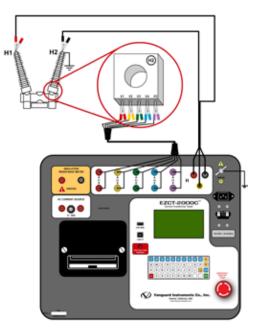

EZCT-2000C Plus

current transformer test set

The EZCT-2000C Plus is Vanguard's third-generation microprocessor-based current transformer test set. Designed specifically for CT testing, the EZCT-2000C Plus has the following outstanding features that can greatly increase productivity and save time during the commissioning stage:

- Performs CT excitation, current-ratio, polarity, and phase angle tests
- Measures insulation resistance and winding resistance of the CT secondary windings Measures the CT's load burden

Standalone or computer-controlled via USB or Bluetooth wireless interface The EZCT-2000C Plus' test leads can be connected to all the CT output terminals, and the complete CT test can be performed automatically without any operator intervention.

Excitation Test

The CT excitation test is performed using the ANSI/IEEE C57.13.1 test method. Test voltage ranges from 50, 300, 500,1200 and 2000 Vac can be selected for the excitation test. The test voltage is raised and lowered automatically by the EZCT-2000C Plus. The excitation test voltage and current data is collected and stored in the unit's internal memory. Knee point voltages (ANSI 10/50, IEC 60044, IEEE-30, IEEE-45) are calculated and printed on the test report. All of the test leads can be connected to the CT output terminals (X1, X2, X3, X4 and X5), and there is no lead switching required during testing. This convenient arrangement allows for testing any of the 10 possible combinations of X1 to X5. Up to 10 excitation tests can be stored in one record. Once the test is completed, the test report and CT excitation curves can be printed on the built-in thermal printer.

Demagnetization

The EZCT-2000C Plus automatically demagnetizes the CT under test when performing an excitation test.

Winding Resistance Test

The EZCT-2000C Plus can measure the DC resistance of transformer windings from 100 micro-ohms to 10 ohms.

CT Winding Insulation Resistance Test Feature

The EZCT-2000C Plus offers an IR test feature that can also measure the insulation resistance of the CT's secondary winding using a test voltage up to 1000 Vdc. The DC winding resistance reading range is from 2 to 500 Mega-ohms. The insulation resistance test results are displayed and printed on the report.

Ratio and Polarity Tests

The CT current-ratio is determined using the ANSI/IEEE C57.12.90 measurement method. A test voltage is applied on any two terminals (X1 to X5) of the CT, and the induced voltage is measured through the H1 and H2 terminals of the CT. The CT current-ratio is displayed and also stored in memory. The current-ratio is measured from 0.8 to 5,000. The CT winding polarity is displayed as a "+" sign (in-phase) or a "-" sign (outof-phase) and is annotated with the phase angle in degrees. The CT current ratio error and phase displacement is also calculated based on the CT burden (or rated power) and rated current.

CT Burden Test

The EZCT-2000C Plus can measure the CT's actual connected burden by injecting a 1A or 5A test current into the load. The CT burden measurements (Voltage, current, Cos $\boldsymbol{\varphi}$, and burden impedance) are displayed on the screen and printed on the test report. This important test verifies the actual CT measured burden before putting the CT in service, thus avoiding any potential configuration conflicts.

ordering information

Part number **9101-UC** 110V EZCT-2000C Plus, cables, and PC software Part number **9102-UC** 220V EZCT-2000C Plus, cables, and PC software Part number 9019-SC Part number TP4-CS

EZCT-2000C Plus Shipping Case TP4 thermal printer paper (24 rolls)

EZCT-2000C Plus Controls & Indicators



Current Ratio and Phase Error Tables

As part of the tabulated test results, the EZCT-2000C Plus can also print the current ratio and current phase error tables.

Current Source

The EZCT-2000C Plus offers a programmable current source (0-20A, 0-15Vac) that can be used to verify CT loads. The on-time timer and output current are displayed on the LCD screen.

Test Record Header Information

Test record header information, including the company, substation name, circuit ID, manufacturer, mode, CT serial number, and the operator's name, can be stored with each record. In addition to the test record header, a 20-character test description for each test in the record (10 tests per record) can also be entered.

User Interface and Display

The EZCT-2000C Plus features a back-lit LCD screen (240 x 128 pixels) that is clearly viewable in both bright sunlight and low-light levels. A "QWERTY"-style membrane keypad is used to enter test information and to control the unit's functions.

Thermal Printer

A 4.5-inch wide built-in thermal printer can print the CT test results and excitation curves.

Computer Interface

The EZCT-2000C Plus can be used as a standalone unit or can be computer-controlled. It can be connected to a PC via the USB port or wirelessly via Bluetooth. In computer-controlled mode, using the included CT Analysis Software, test records can be downloaded from the unit's memory, or CT tests can be run from the PC. Test plans can also be created with the provided software. A test plan defines the various test parameters (test voltage, current range, nameplate ratios, etc.) and can be used to quickly perform tests. Additionally, tabulated test records are automatically exported to PDF, Excel, and XML formats for further analysis.

Internal Test Record Storage

The EZCT-2000C Plus can store up to 140 test records in Flash EEPROM. Each record may contain up to 10 excitation curves, burden test reports, current ratio readings, and polarity and DC resistance readings. Test records can be recalled and printed on the built-in thermal printer. They can also be transferred to a PC using the USB port, wirelessly via Bluetooth, or via the USB Flash drive interface port.

Internal Test Plan Storage

The EZCT-2000C Plus can store up to 128 CT test plans in Flash EEPROM. A test plan is comprised of the excitation test voltage, current range selection, CT nameplate ratios, and CT winding terminal combinations (X1 to X5) for each test and also includes the insulation test definition. Up to 10 test definitions can be stored per test plan. The ability to store test plans makes CT testing an extremely simple process. To perform a test, the EZCT-2000C Plus is connected to the CT terminals and a test plan is selected to run.

Creating test plans for the EZCT-2000C Plus is also a simple process. A test plan can be created using the EZCT-2000C's keypad or can be created on a PC (with provided software) and then downloaded to the EZCT-2000C via the USB port or Bluetooth. For added convenience, test plans can also be copied from a USB Flash drive to the EZCT-2000C via the USB Flash drive interface.

External Data Storage

The EZCT-2000C Plus features a USB Flash drive interface that makes it very convenient to store and transfer test records and test plans. By using a USB Flash drive, test records and test plans can be quickly transferred between a computer and the EZCT-2000C Plus without the need to connect the unit to the computer.

EZCT-2000C Plus thermal printer output

CT EXCITATION TEST RESULTS DATE:05/07/12 TIME:10:04:09 COMPANY: TIME:10:04:09 STATION: STATION: CIRCUIT: HFR: MFR: NODEL: S/N: COMMENTS: OPERATOR: TEST NUMBER: 1 TEST NOTE: TEST NUMBER: 1 TEST NOTE: Statistics TEST VIG RANGE: 300 V TEST VIG RANGE: 2:0 A WINDING RES: 212.1 m-OHMS IEC 10/50 VKp: 2:13.6 VOLTS IEEE 30° VKp: 1098.0 VOLTS IEEE 450 VKp: 1:05.7 VOLTS IEEE 450 VKp: 1:099.97 PRECENT RATIO: 1000:5 MAME PLATE RATIO: 1000:5 MERE PLATE RATIO: 0:02 * NAME PLATE RATIO: 0:02 * PRASE ANGLE: + 0:040 PRASE ANGLE: + 0:040 EXCITATION CUR: 0:038* -0.038* -0.032* 0:032* EXCITATION CUR: 0:033* -0.033* -0.032* -0.032* 0:032* -0.032* EXCITATION - 1:00 -0.033* -0.033* -0.032* -0.032* 0:032* -0.032* -0.032*	CT EXCITATION PLOT A 001 PLOT	.01 A	0.1 A	1.0 A	
$\begin{array}{c c c c c c c c c c c c c c c c c c c $	S AMP BURDE MEAS CURREN MEAS VOLTAG IMPEDANCE < BURDEN: COS φ:	T: 4.979 E: 5.371 26.95 1.079 26.95 1.00 N RES TES ATION RES 997.7 V 9.85 MICH	A OHMS 2 VA RESULTS TEST	••••••• typical burden test	

EZCT-2000C Plus desktop printer output



Computer control and analysis with included EZCT-2000 Software

The EZCT-2000C Plus comes with the Vanguard EZCT-2000 PC software. The EZCT-2000 software can be used to test a current transformer directly from a PC, create and transfer test plans, retrieve test records from the EZCT-2000C Plus, and export test records in Excel format for further analysis.

Carpery Defor: Onu! Wit	Verpr Drop AGE	and in a fi		(Geina		Modul 3% Converts Converts	PCA XUNSP	8					
Gauge Planet		(ALLE)			R R	ta Businer Taul 12	Meding Res Test	Esche Volte		Evolution Subart		Convert Planta Convert Colonitation	Testilas
38-86		000	ī,	1		100	×.	108		1		1.84	
30-04	1.0	100	1			191	12	308		12	•	E.M.	
1040	- 64		1	4	32	93	. IE	208		12	•	- E.A.	
3946	1	100	11	1	×	100	- 12	208	•	2	•	E.R.	
3298	- 38	000	1			95	18	38-		1		1.04	
32901		100	1	8	2	100	iz.	308		1		1.24	
2210		100	1	4	.90	91	×.	308		1	•	5#-	
2010			1	4		95	12	508	•	1		1.24	
9688	3	00	1	-		191	191	108	•	1	•	1.0	
20426			Ţ.	1	9	R	10	308	٠	1	٠	.te	
					States	the Test		() Norther	cien Tari	é.			
					CHIM	· 1.002	6 1	Tetto			-	een-tA	

EZCT-2000C Plus specifications

type	Portable current transformer test set
physical specifications	19"W x 13"H x 16"D (48.3 cm x 33cm x 40.1 cm); Weight: 73 lbs (33.1 kg)
input power	100 – 120 Vac or 200 – 240 Vac (factory pre-set), 50/60 Hz
measurement method	ANSI/IEEE C57.12.90 and ANSI/IEEE C57.13.1 standards
output test voltages	0 – 50 Vac @ 10A max; 0 – 300 Vac @ 10A max; 0 – 500 Vac @ 5A max;
	0 – 1200 Vac @ 1.2A max; 0 – 2000 Vac @ 1A max
	1 – 20A @ 0 – 15 Vac
	Test current and current on-time
	0 – 2,200 Vac; Accuracy: ±1.0% of reading, ±1 volt
	0 – 10A; Accuracy: ±1.0% of reading, ±0.02A
-	0.8 – 999: 0.1%, 1000 – 1999: 0.3%, 2000 – 5000: 1%
phase angle measurement	0 – 360 degrees; Accuracy: ±1.0 degree
resistance reading range	100 micro-ohms – 10 ohms; Accuracy: 2% of reading, ±1 count, ±10 micro-ohms
	2 Mega-ohms – 500 Mega-ohms; Accuracy: 3% of reading, 500 – 1000 Vdc test voltage
	Backlit LCD Screen (240 x 128 pixels; 114mm x 64mm); viewable in bright sunlight and low-light levels
-	Built-in 4.5-inch wide thermal printer
-	One USB port and Bluetooth wireless interface
-	One USB Flash drive interface port (Flash drive not included)
	Windows®-based CT Analysis software is included with purchase price
-	Stores 140 test records. Each test record may contain up to 10 sets of excitation, resistance and ratio data
, ,	Stores 128 test plans. Each test plan can store 10 excitation test voltage and current settings
-	Designed to meet UL 61010A-1 and CAN/CSA C22.2 No. 1010.1-92 standards
	Operating: -10°C to +50°C (+15°F to +122°F); Storage: -30°C to +70°C (-22°F to +158°F)
-	90% RH @ 40°C (104°F) non-condensing
	2,000 m (6,562 ft) to full safety specifications
cables	One 20-foot (6.10m) cable set (X1-X5), one 35-foot (10.69m) H cable set, current source cables, insulation
	test cables, power cord, ground cable. A transportation case is included with the purchase price
warranty	One year on parts and labor

NOTE : the above specifications are valid at nominal voltage and ambient temperature of +25°C (+77°F). Specifications are subject to change without notice

EZCT-2000 PC Software

The EZCT-2000 Windows®-based software is included with all compatible Vanguard Current Transformer Testers (EZCT S2A, EZCT-2000A, EZCT-2000B, EZCT-2000C) at no additional cost. This robust application can be used to control the current transformer tester from a PC to perform tests. It can also be used to retrieve test records from the current transformer tester, analyze test records, and view test results in tabulated and graphical format. Current transformer test plans can also be created and transferred to the current transformer tester.

Retrieving and Analyzing Test Records

The EZCT software can be used to quickly retrieve test records from a compatible Vanguard current transformer tester. Test results can be viewed in tabular and graphical format and can be saved on the PC hard drive.

FILENAME: EICT2000B S DATE: 09/17/12 09 COMPANY: VIC STATION: LAB CIRCUIT: NONE	0:36:07 OPE	NFR: VANGUARD NGOEL: EICT2000B SN: 26289 RATOR: MENTS: 10 Taps Test!		TEST	ST # NOT E TT QUEN
IEEE 30 IEEE 45	IEC 10/50	NP-RATIO: 600/1.	Ex V[Volts]	406 EPhase Angle	10,1
Vkp[Volts]: 593.90%p[Volt	ts]: 483.00Vkp[Volts]: 63	6.504-RATIO: 599.631	Ex I[Amps]:	0.016 In Phase	
Ikp[Amps]: 0.0242 Ikp[Amps	a]: 0.0184 Ikp[Amps]: 0.0	278 % ERROR: 0.0614	Winding Res	689.20 mill-ohm	3
d person in		CURR	ant satio secon	TABLE	
		avoid and	PERCENT NATED	CUMMENT (1.0 A)	
		V3/C08 030.00/4.58 051.00/4.58 037.50/4.50 030.75/4.50 030.75/4.50 030.00/1.90 100 000.00/1.90 100 100 100 100 100 100 100 1	464 - 08.284 364 - 08.294 1.354 - 08.294 1.354 - 08.054 304 - 208.054 304 - 208.054 304 - 208.254 184 - 08.254 184 - 08.254 184 - 08.054 184 - 08.054 185 - 08.	-00.244 -00.204 -00.334 -00.124 -00.354 -00.374 -00.014* -00.014* -100.254 -00.114* -00.254 -00.114* -00.254 -00.124 -00.264 -00.254 -00.064 -00.015 -00.054 -00.054 -00.014 -	
		000.00/1.00 000 04/COS 040.00/1.00 00 018.00/1.00 00 007.50/1.00 00 007.50/1.00 000		000.36 000.30 000.48* 000.49* 120% 200% 045.46 034.43 062.72 053.10 092.46 020.04 092.72 055.37 000.49 020.26	


Current Ratio Error Table

Phase Error Table

this Test Conpenys PPL Marchai TCA2 2000H1 Station 1165 17 24 080749531 Crowt PACE C TC 8 Operato CORE Ciri 12-14 12-13 Khee Point Narker: IEC 10/50 × 13-14 Frequency: 40 Hz Fighteped 12-13 Signaplete Date 1142 1000 1 1.0 Seve to Test Plan Cancel

Test record header information, such as the company name, station, circuit, operator name, manufacturer, model, and serial number can also be edited.

Test Record Details

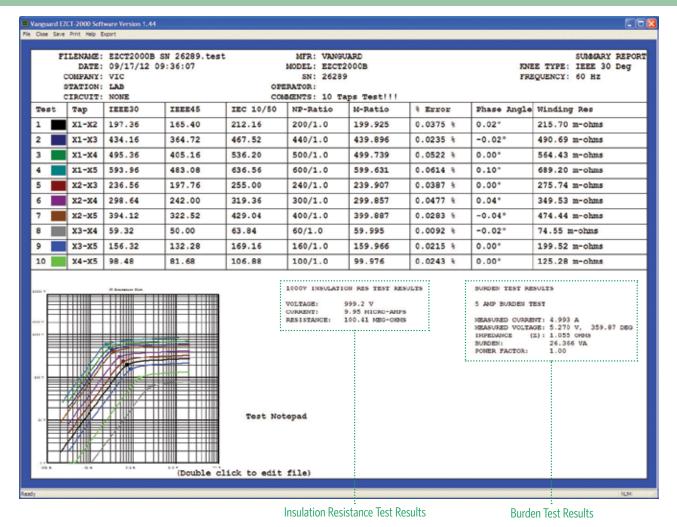

Creating Test Plans for Faster Testing

The EZCT-2000 software can be used to create current transformer test plans. Test plans can then be run from the PC or transferred to the CT Tester to be run from the CT Tester. Test plans cal also be retrieved from a CT Tester using the EZCT-2000 software.

Select device ty	petestplan OE2C1-3	000 0	E201-52	O EZC	T-2000					
Company: Station: Clecult Mit:			Aodet IN: Dpenatur Commeritor							
	ME IEEE 30 deg 🛛 🛩 Nameplate Ratio	Ratio Test	Excitation Test	Winding Res Test	Esch Volla		Exctal Current		Current Rutio Error Calculation	Test Note
X105	1				50		0.2	×	T.L.	
301-304	1				50	~	0.2	~	1.8.00	
3(1-)(3)					50	*	0.2	-	EAL	
X1-X2	1				50	¥	0.2	×	144	
1215					50	*	0.2	~	Edu	
32304					50	*	82		6.9	
X2H3	1				50	3	0.2	×	1.8	
30345	11				50	*	0.2		1.0	
30304					50		0.2	~	2.01.2	
3435					50	٣	0.2	۲	Edi	
	0	Pues Insulati	on Text		Runth	aden Te	et.			
	1	SIM	0.0100	0.3	- Secto	and 4	6 D.B	STate	Cameri + 59	



Vanguard Instruments Company, (VIC), was founded in 1991. Currently, our 28,000 square-foot facility houses Administration, Design & Engineering, and Manufacturing operations. From its inception, VIC's vision was, and is to develop and manufacture innovative test equipment for use in testing substation EHV circuit breakers and other electrical apparatus.

The first VIC product was a computerized circuitbreaker analyzer, which was a resounding success. It became the forerunner of an entire series of circuitbreaker test equipment. Since its beginning, VIC's product line has expanded to include microcomputer-based, precision micro-ohmmeters, single and three phase transformer winding turns-ratio testers, transformer winding-resistance meters, mega-ohm resistance meters, and a variety of other electrical utility maintenance support products.

VIC's performance-oriented products are well suited for the utility industry. They are rugged, reliable, accurate, user friendly, and most are computer controlled. Computer control, with innovative programming, provides many automated testing functions. VIC's instruments eliminate tedious and time-consuming operations, while providing fast, complex, test-result calculations. Errors are reduced and the need to memorize long sequences of procedural steps is eliminated. Every VIC instrument is competitively priced and is covered by a liberal warranty.



Vanguard Instruments Company, Inc.

1520 S. Hellman Avenue • Ontario, California 91761, US, Phone 909-923-9390 • Fax 909-923-9391 www.vanguard-instruments.com